

ShopTerm for NDC-Plus Installation Guide September 28, 2005

The following procedure has been designed to install ShopTerm on a Windows based PC.

Please follow the procedure sequentially and do not proceed until all prior steps have been successfully completed. If you have any problem installing this software, please call NASTech at (888) 962-7832 Ex. 3, Monday through Friday, between the hours of 8:30 am and 5:30 pm CST.

Minimum System Requirements

- Pentium Computer with Windows2000 or WindowsXP.
- At least 128 MB of RAM.
- At least 50 MB of disk space.

Download ShopTerm

- On the NDC-Plus Server, create a **ShopTerm** directory in the **C:\Program Files\NDC_Plus\INSTALL** directory.
- Download **ShopTerm.zip** from the following link:
<http://www.nastechinc.com/SUPPORT/NDCSupport/ShopTerm/ShopTerm.zip>
- Save it to the NDC-Plus Server's **C:\Program Files\NDC_Plus\INSTALL\ShopTerm** directory.
- Un-zip and extract the files to the NDC-Plus Server's **C:\Program Files\NDC_Plus\INSTALL\ShopTerm** directory.

Install ShopTerm

- From the Client PC, run **Setup.exe** from the NDC-Plus Server's **C:\Program Files\NDC_Plus\INSTALL\ShopTerm** directory.
- Follow the onscreen instructions, accepting all defaults.

NDC_Plus Setup

- From the NDC_Plus Mainscreen, click the **System File Maintenance** button followed by the **F4-Station** button to enter into the **Station Maintenance** dialog box.
- Use the arrows on the bottom of the dialog box, navigate to the station number to which you are replacing. Change the **Type** from TT4 to TSE, and change the **Printer** to an Asterisk (*)

ShopTerm Setup

- Edit **ShopTerm.ini** located in the **C:\Program Files\ShopTermWIN** directory to reflect the path of the NDC_Plus directory on the server, for example:
 [Server]
 Path = X:\NDC_Plus\EMULATOR
- Run ShopTerm from the shortcut on the desktop. Click the **Configure** button to set the station number and to select the default **Printer**.